


1 Install DisplayLink software

1. Go to www.displaylink.com.
2. Click **Download Drivers** on the top-right corner of the page.
3. Download and install the latest version of DisplayLink USB Graphics Software for Windows.

☑ **NOTE:** If a **DisplayLink Software Notification** message appears during installation, click **Continue anyway** and complete the installation.

☑ **NOTE:** For best performance, download and install the latest drivers for your computer. If you have a Dell computer, download the drivers from dell.com/support using the Service Tag of your computer.

2 Connect the adapter to your computer

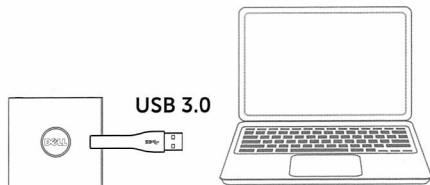

3 Connect devices to the adapter

